

Gage Activation Code Instructions

Tiger Gage Series

All new Tiger Spring Gages and gages returning from service at Larson Systems' factory require an activation code for continued use after 1,000 hours of operation. LSI provides you this activation code after payment confirmation. Please have your gage's serial number (and the service code if returning from service) ready when you call to request your activation code.

The activation code entry instructions in this document apply to the Tiger Series of spring gages.




TIGER GAGE




TIGER GAGE UPGRADE FOR 300 SERIES


Your spring gage is 100% functional until Activation Time expires. Activation Time remaining can be seen on the start up screen when the tester powers up. When Activation Time expires, the gage is disabled and an Activation Code WILL be necessary for continued operation.

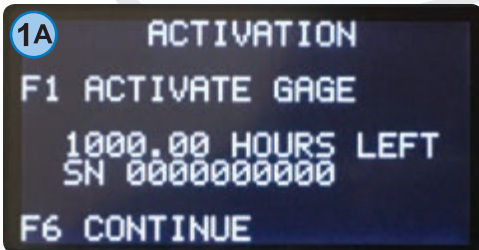


A new Tiger Gage will power up to the **New Activation** screen. Press **F1** to proceed directly to the **Activation Code Entry** screen (4).

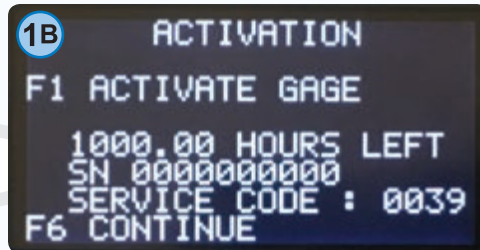


A Tiger Gage serviced by LSI will power up to the **Service Activation** screen. Press **F1** to proceed directly to the **Activation Code Entry** screen (4).

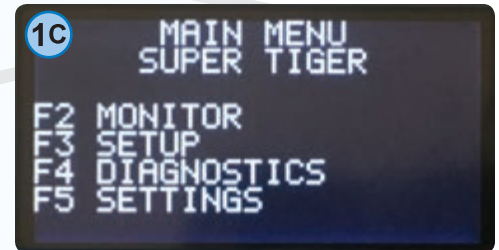


If you are not on one of the **Activation** screens, start at the **Main Menu** and press **F5** to navigate to the **Settings** menu.

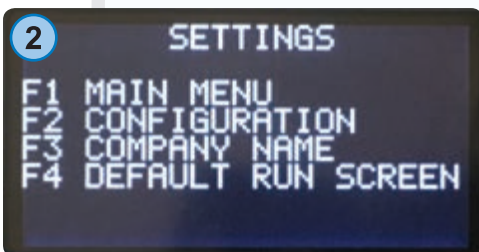

From the **Settings** menu, press **F2** to enter the **Configuration** menu.

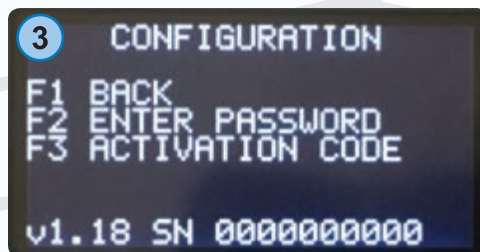

From the **Configuration** menu, press **F3** to proceed to the **Activation Code Entry** screen.

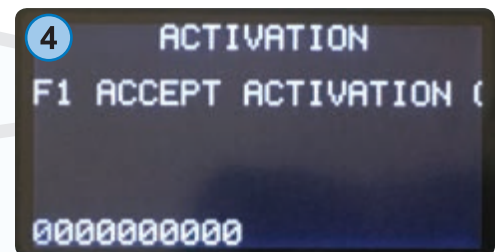

On the **Activation Code Entry** screen, use the **▲ / ▼** keys to scroll through the character list and the **◀ / ▶** keys to move the cursor left and right. Press **F1** to confirm.



Larson Systems Inc.
13847 Aberdeen Street NE
Ham Lake, MN 55304-6789

763-780-2131
info@larsonsystems.com
www.larsonsystems.com

