



Tester Activation Code Instructions

DHT Series


This document contains instructions for activating your Larson Systems DHT Series tester. All new testers and testers that have been serviced by Larson Systems require an activation code for continued use after 1,000 hours of operation. Larson Systems provides you this code after payment confirmation.

The instructions found on the reverse side of this document apply to the DHT Series of testers:




Your tester is 100% functional until Activation Time expires. Activation Time remaining can be seen on the start up screen when the tester powers up. When Activation Time expires, the tester is disabled and an Activation Code WILL be necessary for continued operation.

Tester power up sequence with Activation Time remaining:

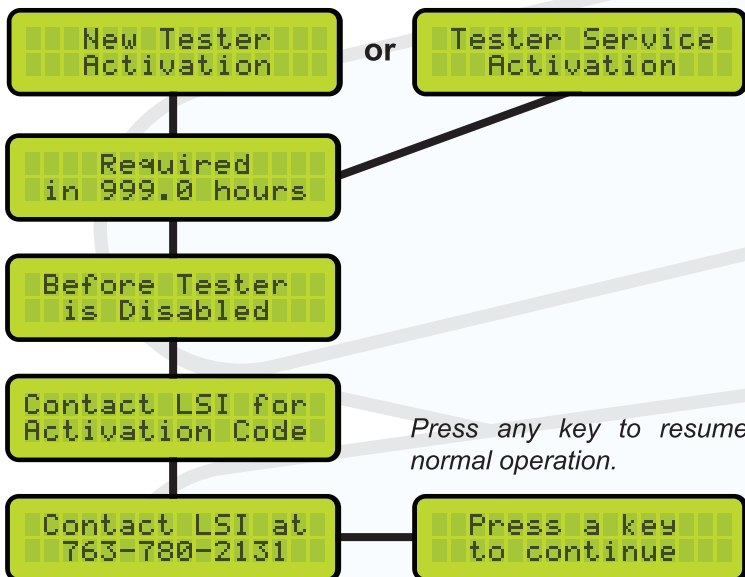

Tester power up sequence when Activation Time has expired:

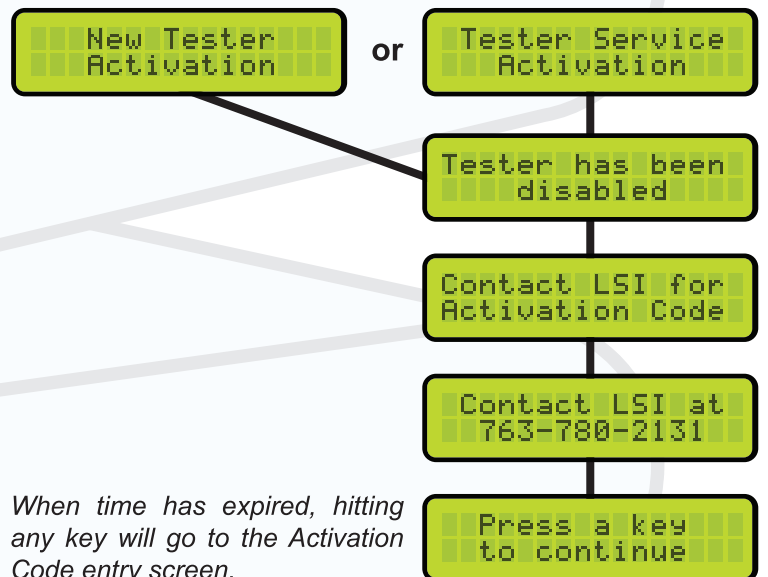

Larson Systems Inc.
13847 Aberdeen Street NE
Ham Lake, MN 55304-6789

763-780-2131
877-780-2131
763-780-2182 (Fax)

info@larsonsystems.com
www.larsonsystems.com



060-6000-0118-02



Tester Activation Code Instructions

DHT Series

Follow these steps to enter an activation code on your Larson Systems DHT Series tester. If Activation Time has expired on the tester, skip to Step 3 and enter the activation code.


1 Press **MODE** until "Setup Mode" is displayed.




2 Press **ZERO LENGTH** or **ZERO ANGLE** to display



3 Press **ZERO FORCE** or **ZERO TORQUE** to enter the **Activation Menu**. The Serial Number and Service Code will appear.

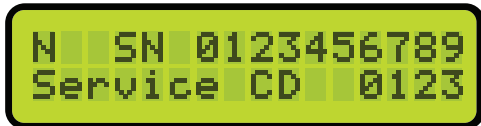

or

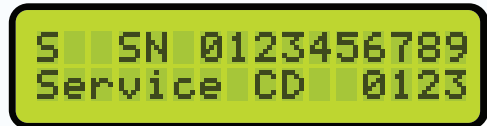

An "N" in the upper left corner represents a New Tester Activation.
An "S" in the upper left corner represents a Service Activation.

For an Activation Extension or Service Activation, Larson Systems will need the 4-digit Service Code displayed on this screen. This code will change if the tester is turned off. Do not turn off the tester before calling LSI with your Serial Number and Service Code information.

4 Press **ZERO LENGTH** or **ZERO ANGLE** to go to the **Activation Code Entry** screen. There will be one character with a blinking cursor on it. Enter the Activation Code here.

Use **ZERO FORCE** or **ZERO TORQUE** to increase the value under the cursor.

Use **UNITS** to decrease the value under the cursor.

Use **ZERO LENGTH** or **ZERO ANGLE** to move the cursor right.

Use **SEND** to move the cursor left.



When all 10 characters are entered, use **ZERO LENGTH** or **ZERO ANGLE** to move off the Activation Code. The word "Done" will appear with the cursor in the word.

Press **ZERO FORCE** or **ZERO TORQUE** to verify the Activation Code. If the Activation Code is valid a success message will appear. You have now successfully activated your tester!

If the display stays on the **Activation Menu**, use **MODE** to return to **Manual Mode**.



Larson Systems Inc.
13847 Aberdeen Street NE
Ham Lake, MN 55304-6789

763-780-2131
877-780-2131
763-780-2182 (Fax)

info@larsonsystems.com
www.larsonsystems.com



060-6000-0118-02